
# Setting up use

## **Output indicator**

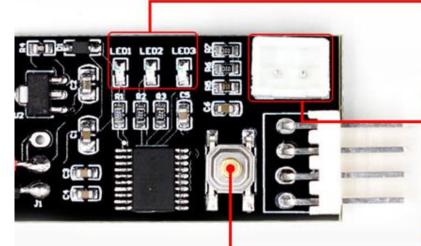

## Thermal probe interface

Hold and accelerate after accumulating /clamping into the armpit

### Mode switching/setting

Click / double click to adjust the output

#### Setting example:

The controller sold from now on has already supported the control of the anti-timing fan. The specific setting method is as follows:

First power off and remove the fan, press and hold the set button to power on the controller, long press the set button for 3 seconds, wait for the three lights to enter the double mountain state and then release, the indicator light double flash, that is, enter the mode setting state; The controller is divided into three working modes, corresponding to the 1~3 indicator light double flashing, by short pressing the button to switch, after setting, long press the button to save and exit the setting mode and automatically return to the normal working state, the modes are:

- Regular PWM fan control mode (default mode) for four-wire fan control of standard Intel specifications.
- 2.Conventional anti-timing PWM fan control, used for most anti-sequential four-wire fan control. When the fan is in normal mode control, the speed change is reversed. When the control line is connected to the negative pole, it is full speed.
- 3.Anti-timing fan 80% control mode, used for a very rare anti-sequence fan, this fan has the opposite speed change in the normal mode control, and does not rotate when the control line is connected to the negative pole.

Normal operation	Acceleration temperature Tu slow flashing indication	Acceleration width Td flash indicator
Fast flashing	■ ■ 70°C	■ ■ 50°C
☐ ☐ Waiting for saving	□ ■ ■ 60°C	□ ■ ■ 40°C
■ □ □ Po is reduced by 5%	■ □ ■ 50°C	■ □ ■ 30°C
☐ ☐ Po increased by 5%	□ □ ■ 45°C	□ □ ■ 20°C
☐ ■ Set MAX high	■ □ 40°C	■ ■ □ 15°C
Set MIN low	□ ■ □ 35°C	□ ■ □ 10°C
☐ ☐ General work	■ □ □ 30°C	■ □ □ 5°C
123	123	123

T<=Tu:PWM=Po

T>Tu: PWM increases with temperature T>(Tu+Td):PWM(%)=100

#### Normal operation:

Click the button, the bottom line output will increase by 5%, double-click the button, the bottom line output will be reduced by 5%, and the value will be changed for 20 seconds. After the middle indicator stops flashing, the parameters will be saved automatically; long press the button to enter the temperature control setting.

#### Temperature control setting:

Accelerate the temperature control setting (slow flash) by clicking and double-clicking to respectively raise and lower the setting value, long press to enter the acceleration width setting;

Acceleration width setting (flash) also click to double-click to change the value, long press to save and exit the temperature setting.

The bottom line is 20%, the acceleration temperature is 35°C, and the acceleration width is 15°C. When the probe temperature is lower than 35°C, the output signal is always 20%. When the probe temperature exceeds 35°C, the controller smoothly increases the output signal according to the temperature rise, accelerate;

When the probe temperature reaches or exceeds  $50 \,^{\circ}$  C (35 + 15), the controller outputs the full speed signal, the fan full speed, specifically to the actual fan speed, depending on the specific performance of the fan can be slightly different.

## **Product information**

Product name	PWM four-wire fan speed controller	
Product number	VHM-802	
Operating Voltage	DC12V can work in the 8-18V range	
Current consumption	Not more than 20mA	
Fan interface	2510-4P 1 missing 1 bend	
Fan current	Interface can withstand 3A	
PWM output	10%~100%	
Operating temperature	-10°C~60°C	
Product Size	34mm*19mm*13mm	

